



AN-113

Measuring Insertion Loss and Return Loss Bidirectionally for Multiple Channels Using an OP931 and Two OP720s

Software and cable configurations that will yield high quality return loss measurements

Overview

With 100G Ethernet and beyond quickly becoming the standard for the fiber optics communication industry, many cable manufacturers want to be able to test multifiber cables with relative speed and ease. Using a single-channel OP931 and two 1xN switches with OPL-Max, an operator can test bidirectional insertion loss and return loss on high-fiber-count cables.

The test setup should be as follow:

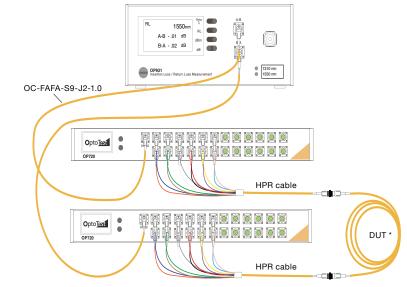


Figure 1: Test setup for measuring ILRL bidirectionally for multiple channels

The OP931, bidirectional insertion loss and return loss test set, connects to the inputs of each OP720. HPR cables are then connected to the output of the OP720 (up to 144 channels) which then connect to fanouts with the DUT residing between these fanouts; a simplex DUT is used to reduce the complexity of the illustration.

* HPR: high performance reference cable * DUT: device under test

Doc: AN-113 Rev. A 12/05/13

1



Measuring Insertion Loss and Return Loss Bidirectionally For Multiple Channels Using OP931 and Two OP720s

AN-113

OPL-MAX Test Sequence

Configuring OPL-Max to run correctly with this configuration is similar to configuring a multi-channel OP930. For a 12-fiber MPO cable, the sequence file should be as follows:

		C	0	- K.				F.	1	1	L.	7.00	. H.		100	0	
-	Description Supposes 1 state	long a balances				098		1	1		5.0	Ranary Long		Alternate Belgement			
		See.					OP9 Chained	and taxation		-		Section 1.	-	Automatica (Channel of		Concession of the local division of the loca
1	All sename h A	1011	-	0.95	0.02	OPMPL1.	-	-	-	-	-		-	CIPAGE 1	-		-
	2 Comprise 2	0.1		1219	1552	OPMIL!								CPM/L		-	
	1 Conector 1 A - B 2 Connector 2 3 Connector 2	100		0.0	102	OPMILY.	-							OPMEN			
	A Completer &	64.4		1348	100	OF MALE			i - 1	0.00				COPARLE			
	4 Compton 5			4248	1000	OPERAT				0.14				OF CHARLE	1.1		
	6 Cereator 8	現.1 現.1 現.1 見.1 見.1		010	The other	OPERATE 1								OFME.I			
	7 Catendar 7	But		1310	100	OPMET	- 3			1				OPLACE			
	4 Cameria 8	191.1		1210	- 100	OPERATE N							1	I. OPMIL!			
	5-Careactor 9	R11		1310	10.02	OPMENT		1 2		1 1				OPAR!	1.04		8
	19 Camerica 19	R11		1218	903	OPMRL1	1.1		E	1.1			1	OPMR.1	1.1.1		i
	11 Cateria for 15	GL1	80	1210	10.2	OPMIL:	1.1.1	- 1	()		1			I OPMEN			2
	43 Camparine 10	104.1	12	4348	9082	OPMD, 1		- 3						OPARLI.	1.1.1		i
	12 Canadra 1 B-A	36.1		1718	10.52	OPER-1	1.1		1. 1	(i i i				Catholite, A			
	N Connector 2	10.1	2	(349	904	OPARLY.			B. 18	1				CAPARE F	1.1	(- · · · ·	8
	48 Cashadar 3	84.1	5	(244	1944	OF ALL A	1.1		1	0.04				OFFICE			¥
	té Cantaitar à	81	4	1348	9.52	OPMR1	1.1.1	1	r 1		r	1	1 4	CPMIL!			
	17 Contector &	18.1 18.1 18.1	6	110	0.62	OP\$80.1	() i	t	F 1	0.04	1		1. 3	CPMR1		()	£
	18 Canador 8	81.1		1310	200	OPMR1			(i i i i i i i i i i i i i i i i i i i	1 1	1	1	C	099463.1			
	78-Contector 7	RL1	- P.	1216	708	OPMR.1	<u> </u>		E	1 1	1.1			COMMENT			L
	24 Connector 8	- R(.1		1110	4538	(101,00,1	2		F	C 1	1		· · · · · ·	0.0446.1	1.1	()	£
	21 Gameric B	10.1		- 100	1018	00546(1)	1.1						1	0.000001			
	28 Conserve 18	64.4	16	1218	1004	OPERATE F			£ 1	C 8	1		C 14	CONTRACT.			
	25 Converso 11	Bar.	10	1210	1608	((444)).1	1 14		N 1	1	1		1 4	CONSIGN.			
	34 Camadar 10	18.1	10	00	9.52	09580,1			1	C 4	1		1 1	D OPERAT		1	8

Figure 2: Sequence file for 12-fiber MPO cable

As with all sequence files, Column D will specify which fiber in the cable will be tested, Columns E and F will specify wavelength(s) and Columns G and H specify the power meter and channel used for testing. In the case of the bidirectional test with an OP931, these Columns G and H, as above, should read "OPMRL1" and "2", respectively.

Since the distance from the front panel to the RL reference is not guaranteed to be the same for both directions, it is advised that Column N appears as shown above. The "1" in the first channel in the forward direction (coming from the A-B port) and a "-1" for the remaining channels in that direction will allow the RL Reference to be copied from the first channel to all forward direction channels. Likewise, a "2" and "-2" for the reverse direction (coming from the B-A port) channels will have the same effect, but allow for these channels to be referenced separately from the forward channels.

Column R is the only fundamental departure from a standard sequence file since it is not necessary to include on unidirectional sequence files. For all forward direction channels, this column should read "0" and for all reverse direction channels, this column should read "1".

Referencing Instructions Bidirectional Insertion Loss Reference

To properly reference insertion loss bidirectionally, connect the launch leads from the A-B/B-A source connectors to the input ports of the two switches. Do not use the external power meter port for reference. Connect the reference fanout from the A-B switch to the reference fanout on the B-A switch via a mating adapter and perform an insertion loss reference in the software. This will perform two separate reference cycles—one for the A-B direction and one for the B-A direction.

Doc: AN-113 Rev. A 12/05/13

Measurement Devices



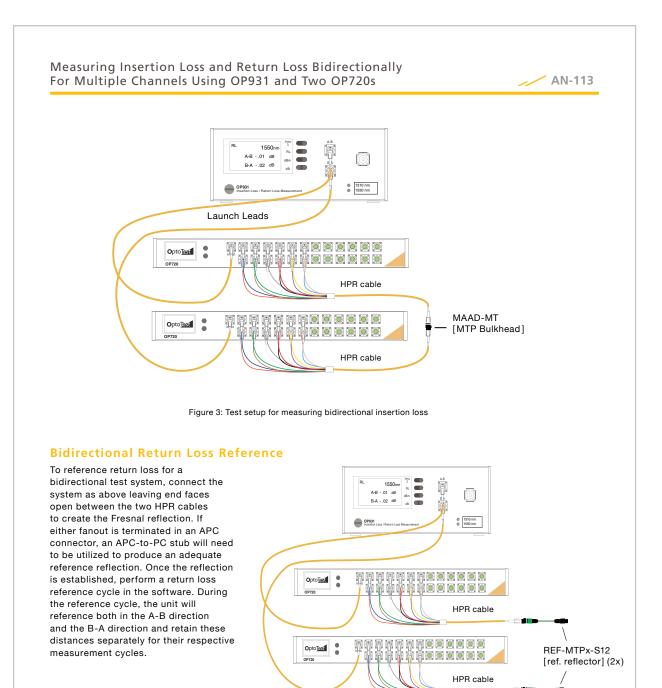


Figure 4: Test setup for measuring bidirectional return loss


MAAD-MT [MTP Bulkhead] (2x)

Doc: AN-113 Rev. A 12/05/13

3

Measurement Devices



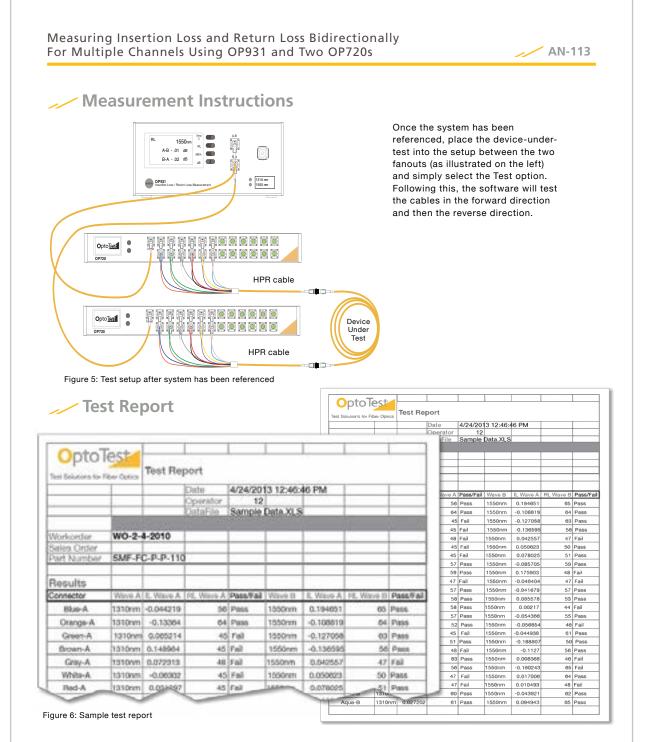

Doc: AN-113 Rev. A 12/05/13