







KEY FEATURES

> READS ALL HEADS

- Power: thermopiles, photodetectors and pyroelectrics
- Energy: thermopiles (in single shot mode), photodetectors and pyroelectrics

LARGE TOUCHSCREEN COLOR LCD DISPLAY

- 5.6in diagonal
- FULLY touchscreen controls

> UNIQUE ERGONOMIC DESIGN

Great for both handheld and tabletop use, with improved rubber bands and kickstand for better stability

> INTUITIVE USER INTERFACE

Easy to navigate interface, with many display features:

- Single or dual graph display
- Instant access to the main functions
- Function search tool
- Interface available in multiple languages

> USB KEY ACCESS

Store data directly on a USB key


> REAL-TIME STATISTICAL FUNCTIONS

Max, min, average, standard deviation, RMS and PTP stability, pulse # and repetition rate

> AVAILABLE OUTPUTS

USB Key, analog output, RS-232, PC-USB, Ethernet

CONNECTIVITY

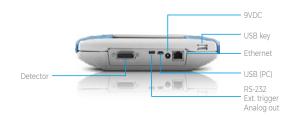

ACCESSORIES



Additional 9V power supply

Battery pack



19(



USB, RS-232, external trigger & analog out cables



Pelican carrying case

5/22 / V10 / SGIF / gentec/maestra

1

Germany and Other Countries

Laser Components Germany GmbH
Tel: +49 8142 2864-0
Fax: +49 8142 2864-11
info@lasercomponents.com
www.lasercomponents.com

France

Laser Components S.A.S.
Tel: +33 1 39 59 52 25
Fax: +33 1 39 59 53 50
info@lasercomponents.fr
www.lasercomponents.fr

Nordic Countries

Laser Components Nordic AB Tel: +46 31 703 71 73 Fax: +46 31 703 71 01 info@lasercomponents.se www.lasercomponents.se



MAESTRO Specifications





	MAESTRO
DETECTOR TYPES	ALL MODELS: thermopiles, pyroelectrics, photodetectors
DISPLAY	Touchscreen 5.6 in color LCD

POWER METER SPECIFICATIONS

Power Range

Thermopile $1\,\mu\text{W}$ to 30 kW 4 pW to 3 W Photodetector Monitor accuracy 0.25% ± 5 μV best scale

Statistics Current value, max, min, average, standard deviation, RMS & PTP stability, time

ENERGY METER SPECIFICATIONS

Energy range 2 fJ to 30 kJ Monitor accuracy

0.1 to 99.9%, 0.1% resolution, default 2% Software trigger level Repetition rate 2000 Hz / 10 000 Hz in sampling

Real-time data transfer (To USB key) 2000 Hz

Statistics Current value, max, min, average, std dev., RMS & PTP stability, pulse #, rep. rate and avg power

DETECTOR COMPATIBILITY

Average power & single shot energy Thermopile Photodetector Average power & pulse energy Pyroelectric Pulse energy & average power

GENERAL SPECIFICATIONS

Interface languages English, German, French and Japanese Digital display size 112.9 x 84.7 mm LCD - 640 x 480 pixels

Data display Real-time, scope, statistics, digital tuning needle and averaging Analog output 0-1 Volt full scale ±0.5%

USB key

Rising edge external trigger TTL compatible, 2-25 V at 0.4 mA Serial commands via USB (standard), Ethernet or RS-232 (cable in option)

Dimensions 210W x 122H x 45D mm Weight (with batteries) 0.67 kg

Battery type 4 x rechargeable 1.2 V Ni-MH AA

6.5 hours Battery life

External power supply 100/240 VAC 50 - 60 Hz to 9 VDC 1.66 A

ORDERING INFORMATION

Product page

Data storage via



Specifications are subject to change without notice

2

Germany and Other Countries Laser Components Germany GmbH

Tel: +49 8142 2864-0 Fax: +49 8142 2864-11 info@lasercomponents.com www.lasercomponents.com

France

Laser Components S.A.S. Tel: +33 1 39 59 52 25 Fax: +33 1 39 59 53 50 info@lasercomponents.fr www.lasercomponents.fr

Nordic Countries

Laser Components Nordic AB Tel: +46 31 703 71 73 Fax: +46 31 703 71 01 info@lasercomponents.se www.lasercomponents.se



HOME

Set Device: Set all the parameters related to your MAESTRO device.

Set Measure: Set all the parameters related to your sensor.

Display: Set the device in dual or full screen display mode and choose

the display(s) you want.

Acquisition: Set all your acquisition parameters (time, sample rate, etc.).

Startup Config: Choose how your MAESTRO will remember your sensor

settings at startup

About: View the main parameters and update your MAESTRO.



SET DEVICE

Use the elements in this menu to set the parameters related to your MAESTRO:

Number of Digits: Use this menu to set the precision of the measurement.

Serial Commands: Set compatibility with SOLO2 and use the RS-232, USB and

analog outputs

Ethernet: Configure the Ethernet communication protocol.

Languages: Select the display language: English, German, Japanese or

French

Recalibrate touchscreen:

en: Recalibrate your touchscreen by following the simple

step-by-step procedure

SET MEASURE Wavelength Range Measure Mode Corrections Trigger Level

SET MEASURE

Use the elements in this menu to set everything related to your measurements:

Wavelength: Select one of the standard wavelengths offered, or enter

a custom value and create your own list of standard

wavelengths.

Range: Set the measuring range to autoscale or a fixed scale.

Measure Mode: Use this menu to decide what type of measurements will be

displayed: average power, single shot energy, pulse-to-pulse

energy, etc.

Corrections: Enter multipliers and offsets.

Trigger Level: Set the trigger level in 0.1% steps, from 0.1% and 99.9%.



DUAL SCREEN DISPLAY (SHOWN WITH SCOPE DISPLAY)

Any display mode can be used in both single or dual display mode. In dual display mode, the Real-Time display takes the upper portion of the screen, while any of the other displays (Scope, Needle, Averaging or Statistics) is set on the lower portion. The display in the lower portion can be easily changed using the parameters bar with drop-down menus in the center of the screen. You can also expand one of the displays to have it in Full Screen mode using the maximize button. Just as easily, you can go back to Dual Screen display by using the minimize button.

05/22 / V10 / SG-IF / gentec/maestro

3

Germany and Other Countries

Laser Components Germany GmbH
Tel: +49 8142 2864-0
Fax: +49 8142 2864-11
info@lasercomponents.com
www.lasercomponents.com

France

laser Components S.A.S.
Tel: +33 1 39 59 52 25
Fax: +33 1 39 59 53 50
info@lasercomponents.fr
www.lasercomponents.fr

Nordic Countries

Laser Components Nordic AB Tel: +46 31 703 71 73 Fax: +46 31 703 71 01 info@lasercomponents.se www.lasercomponents.se

MAESTRO Specifications



REAL-TIME DISPLAY

This display shows the measured value in real time, with a corresponding bar graph below. The large size of the digits and high contrast of the graphics allow to see the measurement from a good distance. This mode is also always present in dual screen mode, in the upper portion of the screen.

- Very large digits
- Bar graph



SCOPE DISPLAY

With its line filling from the right of the screen, in a first-in/first-out manner, this display mode is a good approximation of an actual oscilloscope reading. Settings include time (x-axis) and range (y-axis). Basic statistics can also be displayed directly on the screen.


- Oscilloscope-type graph
- On-screen, real-time statistics (min, max and average)
- Fully customizable x and y axis



NEEDLE DISPLAY

Exactly like an analog needle, only faster! This mode is particularly useful when tuning a laser. The Real-time value is also displayed at the top of the screen.

- Ultra-fast readings
- Great for tuning
- Real-time value at the top of the screen
- Min and Max Values hold

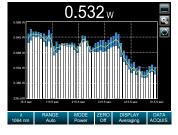

AVERAGING DISPLAY

This very unique mode is perfect to show the trend of a laser over time. Set the number of points per batch and let the MAESTRO identify the minimum and maximum values of every batch. A yellow curve then follows the average of each batch, displayed as bars on the screen. The wider the difference between the white and blue portions of a bar (corresponding to the min and max values), the more unstable your laser is.

- Calculates the min, max and average values of batches of measurements
- Perfect to check laser stability over time

Specifications are subject to change without notice

4

Germany and Other Countries

Laser Components Germany GmbH Tel: +49 8142 2864-0 Fax: +49 8142 2864-11 info@lasercomponents.com www.lasercomponents.com

France

Laser Components S.A.S. Tel: +33 1 39 59 52 25 Fax: +33 1 39 59 53 50 info@lasercomponents.fr www.lasercomponents.fr

Nordic Countries

Laser Components Nordic AB Tel: +46 31 703 71 73 Fax: +46 31 703 71 01 info@lasercomponents.se www.lasercomponents.se